 


 


 

 


 
 





 
 

 
 








 






Originale	Sostituto
 Standby	 Power
 Mute	 Mute
 Source	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Audio I/II	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 -/--	 Shift + Guide
 Recall	 Pre Ch
 Menu	 Menu
 Exit	 Exit
 Text	 Text
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Red	 Red
 Green	 Green





Originale	Sostituto
Yellow	Yellow
Blue	Blue
Subtitle	Subt
Size	Format
Reveal	Back
Mix	Smart
Index	List
EPG	Guide
Media	Media
Timeshift	Options
Tv/Radio	TV/R
Play	Play
Pause/Hold	Pause
Rec	Rec
Stop/FAV	Stop
I<</Cancel	I<<
>>I/Subpage	>>I

Originale	Sostituto
<</FAV-	<<
>>/FAV+	>>

