


 

 





 



 

 





 


 











Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Pre Ch
 Info	 Info
 EPG	 Guide
 Source	 AV

Originale	Sostituto
 Vol+	 Vol +
 Vol-	 Vol -
 Prog+	 Ch +
 Prog-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Sleep	 Sleep
 Menu	 Menu
 FAV	 Shift + Pre Ch
 Format	 Format
 Text	 Text
 Subtitle	 Subt
 Red/Size	 Red
 Green/Reveal	 Green





Originale		Sostituto		Originale		Sostituto	
	Yellow/Index		Yellow		Repeat	+	Shift + Text
	Blue/Hold		Blue		A-B		TV/R
	DVD Lang		Dual				
	Step		3D				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	I<</Previous		I<<				
	>>I/Next		>>I				
	<</FR		<<				
	>>/FF/MTS		>>				
	Open/Close		Eject				
	Prog	+	Shift + Sleep				
	Zoom	+	Shift + Eject				
	Title		Back				
	DVD Setup		Options				
	DVD Menu		D. Menu				

