

 
 
 
 
 
 
 

 



 


 


 





 

 
 
 










 


 
 
 


 
 


 



 
 
 
 






 



 
 











 

 

 
 



 
 
 

 
 
Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 6	 6
 5	 5
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Repeat	 Text
 Shuffle	 Media
 Play	 Play

Originale	Sostituto
 Pause	 Pause
 Stop	 Stop
 >>	 >>
 <<	 <<
 >>	 >>
 <<	 <<
 Option	 Options
 Display	 Info
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Folder Up	 Ch +
 Folder Down	 Ch -
 Clear	 Exit
 Sleep	 Sleep





Originale		Sostituto	
	Dimmer		TV/R
	TP		Pre Ch
	Mono		Dual
	Preset Up		Shift + Up
	Preset Down		Shift + Down
	Memory		Rec
	Tuning Up		Green
	Tuning Down		Red
	CD		Shift + 1
	USB		Shift + 2
	AUX		Shift + 3
	Tuner		Shift + 4
	iPod		Shift + 5
	Folder Up iPod		Shift + Ch +
	Folder Down iPod		Shift + Ch -
	Repeat iPod		Smart
	Shuffle iPod		Shift + Media

Originale		Sostituto	
	Enter iPod		Shift + Ok
	>>I iPod		Shift + Right
	I<< iPod		Shift + Left
	Menu iPod		Menu
	Play/Pause iPod		Shift + Play
	Open/Close		Eject
	Clock		D. Menu
	Timer		AV

