





| Originale   | Sostituto  |
|---|--|
|    |  Power                  |
|    |  Stop / Hold            |
|    |  Pause / Step / Freeze  |
|    |  Rec / Rec Mode         |
|    |  << / Tune-             |
|    |  Play / Slow            |
|    |  >> / Tune+             |
|    |  Guide / EPG / -/--     |
|    |  Eject / Surround       |
|    |  Display / Media        |
|   |  AV / Input / RDS      |
|  |  TV/Radio /           |
|  |  Picture / Format     |
|  |  Menu / Home          |
|  |  Smart / List         |
|  |  Shift + Smart / List |
|  |  Info / Angle         |

| Originale   | Sostituto   |
|---|---|
|    |  Up                            |
|    |  Left                          |
|    |  OK                            |
|    |  Right                         |
|    |  Exit / Cancel / Clear         |
|    |  Down                          |
|    |  Setup / OPT /                 |
|    |  Back / Return                 |
|    |  CH- / Page-                   |
|    |  CH+ / Page+                   |
|   |  Vol-                         |
|  |  Mute / Dimmer               |
|  |  Vol+                        |
|  |  Red / Netflix / Search      |
|  |  Green / APP / Repeat        |
|  |  Yellow / YouTube / Repeat   |
|  |  Blue / Prime Video / Random |



