




| Originale   | Sostituto | Originale   | Sostituto |
|---|-----------|---|-----------|
|    | Power     |    | Power     |
|    | Mute      |    | Mute      |
|    | 1         |    | 1         |
|    | 2         |    | 2         |
|    | 3         |    | 3         |
|    | 4         |    | 4         |
|    | 5         |    | 5         |
|    | 6         |    | 6         |
|    | 7         |    | 7         |
|    | 8         |    | 8         |
|   | 9         |   | 9         |
|  | 0         |  | 0         |
|  | Menu      |  | Menu      |
|  | Exit      |  | Exit      |
|  | Up/CH+    |  | Up        |
|  | Down/CH-  |  | Down      |
|  | Right     |  | Right     |

| Originale   | Sostituto | Originale   | Sostituto |
|---|-----------|---|-----------|
|    | Left      |    | Left      |
|    | OK        |    | Ok        |
|    | P+        |    | Ch +      |
|    | P-        |    | Ch -      |
|    | Vol+      |    | Vol +     |
|    | Vol-      |    | Vol -     |
|    | SAT       |    | Smart     |
|    | FAV       |    | Pre Ch    |
|    | EPG       |    | Guide     |
|    | [ ]/♪     |    | Dual      |
|   | Tv/AV     |   | AV        |
|  | Play      |  | Play      |
|  | Pause     |  | Pause     |
|  | Back      |  | Back      |
|  | UHF       |  | TV/R      |
|  | i         |  | Info      |
|  | PAL/NTSC  |  | Format    |



