






 

 















 












Originale	Sostituto
 Power	 Power
 Source	 AV
 Sound	 Dual
 *	 Eject
 [+]	 3D
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 [00]	 Guide
 [i+]/[?]	 Info
 Return	 Back
 [> <]/PC	 Format
 Digital	 Media
 Analog	 Smart
 Menu	 Menu
 Up	 Up

Originale	Sostituto
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Text	 Text
 Recall	 Pre Ch
 PR+/[≡▲]	 Ch +



