 
 
 
 
 
 
 

 



 
 

 
 
 
 

 
 
 
 
 
 
 



 

 

 
 


 

 
 

 




 


 
 

 

 
 
 

 

 
 








Originale		Sostituto		Originale		Sostituto	
	Operate		Power		C/Erase		3D
	Open/Close		Eject		ShowView		Format
	1		1		HDD		Smart
	2		2		DVD		Media
	3		3		Input		AV
	4		4		Start Menu		Menu
	5		5		DVD Menu/Original		Shift + Menu
	6		6		Return		Back
	7		7		Exit		Exit
	8		8		DVD Title/Rec List		D. Menu
	9		9		SET/Enter		Ok
	0		0		Up		Up
	-/--		Guide		Down		Down
	Tv/DVD		TV/R		Right		Right
	CH+		Ch +		Left		Left
	CH-		Ch -		Dubbing		List
	Direct		Options		P IN P		Text





Originale	Sostituto
Timer On/Off	Shift + AV
Timeshift	Shift + Guide
Blue/A-B	Blue
Red/B	Red
Green/C	Green
Yellow/D	Yellow
Play	Play
<</REV	<<
>>/FWD	>>
Stop/Live	Stop
Still/Pause	Pause
I>/Slow	Sleep
Rec	Rec
Stop Rec	Shift + Stop
Pause Rec	Shift + Pause
>>I/F.ADV Skip	>>I
I<</I F.ADV	I<<

Originale	Sostituto
Replay	Shift + Play
Skip Search	Shift + TV/R
Zoom/Rec Mode	Shift + Rec
Function	Shift + D. Menu
Audio	Dual
Angle	Shift + Red
Subtitle	Subt
Direct Rec Tv	Shift + Text
Tamper Proof/On Screen	Shift + Format
RGB Off/Chapter Mark	Shift + Pre Ch
Operate Tv	Shift + Power
Back	Info
Vol+ Tv Control	Vol +
Vol- Tv Control	Vol -
CH+ Tv Control	Shift + Ch +
CH- Tv Control	Shift + Ch -
Input Tv Control	Pre Ch

