 


 

 


 
 

 

 
 
 

 

















 



 


 


 






 




 
 

 

 




Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 CBL/SAT	 1
 DVD	 2
 Blu-ray	 3
 Game	 4
 AUX	 5
 Media Player	 6
 USB	 7
 TV Audio	 8
 Tuner	 9
 Bluetooth	 Guide
 Internet Radio	 Pre Ch
 Mute	 Mute
 CH/Page+	 Ch +
 CH/Page-	 Ch -

Originale	Sostituto
 Vol+	 Vol +
 Vol-	 Vol -
 Eco	 3D
 Info	 Info
 Option	 Options
 Back	 Back
 Setup	 Menu
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Play	 Play
 Pause	 Pause
 I<</Tune-	 I<<
 >>I/Tune+	 >>I
 Green/Movie	 Green

 


 

 


 
 

 

 
 
 

 










 











 


 



 


Originale		Sostituto		Originale		Sostituto	
	Red/Music		Red				
	Blue/Game		Blue				
	Yellow/Pure		Yellow				
	Quick Select 1		D. Menu				
	Quick Select 2		Text				
	Quick Select 3		Eject				
	Quick Select 4		AV				





Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 CBL/SAT	 1
 DVD	 2
 Blu-ray	 3
 Game	 4
 AUX	 5
 Media Player	 6
 USB	 7
 TV Audio	 8
 Tuner	 9
 Bluetooth	 0
 Internet Radio	 Pre Ch
 CH/Page+	 Ch +
 CH/Page-	 Ch -
 Vol+	 Vol +

Originale	Sostituto
 Vol-	 Vol -
 Mute	 Mute
 Back	 Back
 Enter	 Ok
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Play	 Play
 Pause	 Pause
 I<</Tune-	 I<<
 >>I/Tune+	 >>I
 Quick Select 1	 D. Menu
 Quick Select 4	 AV
 Quick Select 3	 Eject
 Quick Select 2	 Text

