

 



 
 
 

 
 


 



 
 
 
 
 
 
 
 
 
 
 
 
 

 





Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Repeat	 Text
 Menu Disc	 Menu
 Menu/Info	 Info
 Home	 Smart

Originale	Sostituto
 Title/popup	 Media
 Back	 Back
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 <<	 <<
 >>	 >>
 I<<	 I<<
 >>I	 >>I
 Subtitle	 Subt
 Red	 Red
 Green	 Green





Originale		Sostituto	
	Yellow		Yellow
	Blue		Blue
	Audio		Dual
	*		Options
	Power Tv		Shift + Power
	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	PR/CH+ Tv		Ch +
	PR/CH- Tv		Ch -
	AV Input Tv		AV
	Mute Tv		Mute

Originale		Sostituto	

