


 


 

 



 

 

 
 


 

 
 

 






 



 



 
 


 
 

 
 
 
 
 
 
 
 
 
 




 


 

 





	Originale	Sostituto		Originale	Sostituto
	Power	 Power		Exit	 Exit
	Mute	 Mute		Up	 Up
	Rec List	 Smart		Down	 Down
	CH/List	 Media		Right	 Right
	Subtitle	 Subt		Left	 Left
	Repeat	 Shift + Text		Ok	 Ok
	Rec	 Rec		1	 1
	Stop	 Stop		2	 2
	I<<	 I<<		3	 3
	>>I	 >>I		4	 4
	Pause	 Pause		5	 5
	Play	 Play		6	 6
	<<	 <<		7	 7
	>>	 >>		8	 8
	Input	 AV		9	 9
	Display	 Info		0	 0
	Menu	 Menu		Recall	 Back





Originale	Sostituto
FAV	Pre Ch
Vol+	Vol +
Vol-	Vol -
Picture	+ Shift + Format
Epg	Guide
Sound	Dual
Sleep	Sleep
Ch+	Ch +
Ch-	Ch -
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Tv/Txt	Text
Cancel	Eject
Reveal	3D
Nicam/A2	Options

Originale	Sostituto
Size	Format
Hold	TV/R
Subpage	D. Menu
Index	List

