 






 



 



 
 


 
 


 
 
 
 
 


 


 
 


 
 


 



 
 

 





 
 
 












Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Left	 Left
 Mute	 Mute	 OK	 Ok
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Vol+	 Vol +
 4	 4	 Vol-	 Vol -
 5	 5	 Red	 Red
 6	 6	 Yellow	 Yellow
 7	 7	 Blue	 Blue
 8	 8	 Green	 Green
 9	 9	 EPG	 Guide
 0	 0	 Subtitle	 Subt
 Menu	 Menu	 TTX	 Text
 Exit	 Exit	 Audio	 Dual
 Up	 Up	 i	 Info
 Down	 Down	 FAV	 Pre Ch
 Right	 Right	 Tv/Radio	 TV/R

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 TV	 DVD
 Mute	 Mute	 SAT	 AUX
 1	 1	 PLAY MODE	 REC MODE
 2	 2	 Play	 Pause
 3	 3	 Stop	 FF
 4	 4	 FR	 Play/Pause
 5	 5	 DISC NAV	 SOUND
 6	 6	 LIST	 AD
 7	 7	 DUAL	 SUBT
 8	 8	 PROG	 PICTURE
9	9	SLEEP	TV/R
0	0	E-MANUAL	REPEAT
MENU	MENU	D.MENU	ZOOM
EXIT	EXIT	TEXT	TIMER
Up	Up	TOP MENU	DISPLAY
Down	Down	MENU	INFO
Right	Right	OK	OK
Left	Left	CLEAR	RETURN
Vol+	Vol+	EXIT	BACK
Vol-	Vol-	HOME	HOME
Red	Red	SMART	SMART
Yellow	Yellow	APP	APP
Blue	Blue	MEDIA	MEDIA
Green	Green	VOL+	VOL+
EPG	EPG	CH-	CH-
Subtitle	Subtitle	1	2
TTX	TTX	3	4
AUDIO	AUDIO	5	6
EPG	EPG	7	8
Subtitle	Subtitle	8	9
TTX	TTX	9	0
AUDIO	AUDIO	0	PRE-CH
EPG	EPG	GUIDE	GUIDE
Subtitle	Subtitle	A	B
TTX	TTX	C	D
AUDIO	AUDIO	Mandis SHOP	Mandis SHOP
i	i	www.mandis.tv	www.mandis.tv
FAV	FAV		
O/P	O/P		



