



Originale	Sostituto
 Power	 Power
 Play	 Play
 Pause	 Pause
 <<<	 <<<
 >>>	 >>>
  <<<	  <<<
 >>>	 >>>
 Stop	 Stop
 Rec	 Rec
 Tv/TXT	 Text
 Cancel	 Back
 Reveal	 D. Menu
 Hold	 Options
 Size	 Eject
 Subpage	 Shift + Subt
 Index	 Info
 Red	 Red

Originale	Sostituto
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Source	 AV
 Menu	 Menu
 DVB	 Smart
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 1	 1





Originale	Sostituto
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	SHIFT + GUIDE
Recall	FAV PRE-CH
Picture	SHIFT + PICTURE FORMAT
Sound	SHIFT + SOUND DUAL
Nicam/A2	APP MEDIA
Mute	MUTE
Sleep	PROG SLEEP
Tv/Radio	SEARCH TV/R

Originale	Sostituto
FAV	SHIFT + FAV PRE-CH
FAV+	SHIFT + + CH
FAV-	SHIFT + CH -
Subtitle	AD SUBT
Pic Format	PICTURE FORMAT
Language	SOUND DUAL
EPG	-/-- GUIDE
Text	DISC NAV LIST
Display	ECO 3D

