




Originale	Sostituto
 Power	 Power
 Play	 Play
 Pause	 Pause
 <<<	 <<<
 >>>	 >>>
  <<<	  <<<
 >>>	 >>>
 Stop	 Stop
 Rec	 Rec
 Tv/TXT	 Text
 Cancel	 Shift + Exit
 Hold	 Options
 Reveal	 D. Menu
 Size	 3D
 Red	 Red
 Green	 Green
 Subpage	 Eject

Originale	Sostituto
 Yellow	 Yellow
 Index	 List
 Blue	 Blue
 CH+	 Ch +
 CH-	 Ch -
 Input	 AV
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Menu	 Menu
 Exit	 Exit
 DVB	 Smart
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK





Originale	Sostituto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	SHIFT + -/-- Shift + Guide
↺	RETURN BACK Back
PICTURE	SHIFT + PICTURE FORMAT Shift + Format
SOUND	SHIFT + SOUND DUAL Shift + Dual
NICAM/A2	APP MEDIA Media
SLEEP	PROG SLEEP Sleep
TV/RADIO	SEARCH TV/R TV/R

Originale	Sostituto
FAV	FAV
FAV+	FAV+
FAV-	FAV-
SUBTITLE	AD SUBT Subt
PIC FORMAT	PICTURE FORMAT Format
LANGUAGE	SOUND DUAL Dual
TEXT	SHIFT + REPEAT TEXT Shift + Text
EPG	-/-- GUIDE Guide
DISPLAY	DISPLAY INFO Info

