


 



 







 

 

 


 
 

 



 

 

 
 
 



 


 
 



 

 
 








 



 








Originale		Sostituto		Originale		Sostituto	
	Power		Power		Menu/Set		MENU
	Mute		MUTE		V.Size		V-FOR
	Tv/Video		SRC		MTS		MEDIA
	Sleep		VOD		Sound		Audio
	◆ Bright		-/- / EPG		Picture		Subt.
	PIP		WIDE		1		1
	Exit		EXIT		2		2
	Text		TEXT		3		3
	Pre PG		P/C / FAV		4		4
	Up		UP		5		5
	Down		DOWN		6		6
	Right		RIGHT		7		7
	Left		LEFT		8		8
	PG+		CH +		9		9
	PG-		CH -		0		0
	Vol+		VOL +		Time		TV/R
	Vol-		VOL -		Still		OPT+





Originale		Sostituto		Originale		Sostituto	
	Red/Erase		Red (A)				
	Green/Skip		Green (B)				
	Yellow/Insert		Yellow (C)				
	Blue/Replace		Blue (D)				
	PG Info		INFO				

