



 

 

 







 
 





























 




 
 


 
 




 


 
 




 
 
 
 
 






 
 















 
 
 


 
 



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up / CH + / I<<	 Up
 3	 3	 Down / CH - / >>I	 Down
 4	 4	 Right / Vol +	 Right
 5	 5	 Left / Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 Up / CH + / I<<	 I<<
 8	 8	 Down / CH - / >>I	 >>I
 9	 9	 Up / CH + / I<<	 Ch +
 0	 0	 Down / CH - / >>I	 Ch -
 FAV	 Shift +  Pre Ch	 Left / Vol -	 Vol -
 Recall	 Pre Ch	 Right / Vol +	 Vol +
 Game	 Media	 Red / Zoom	 Red
 Auto	 Smart	 Green / Lan/Audio	 Green
 Info	 Info	 Yellow /	 Yellow

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 TV	 AUX
 Mute	 Mute	 DVD	 SAT
 1	 1	 PLAY MODE	 REC MODE
 2	 2	 II	 ■
 3	 3	 ⏮	 ⏭
 4	 4	 SOUND	 AD
 5	 5	 LIST	 SUBT
 6	 6	 PROG	 PICTURE
 7	 7	 SLEEP	 ECO
 8	 8	 E-MANUAL	 TIMER
 9	 9	 D.MENU	 AV
 0	 0	 TOP MENU	 DISPLAY
 FAV	 Shift +  Pre Ch	 MENU	 INFO
 Recall	 Pre Ch	 OK	 OK
 Game	 Media	 CLEAR	 RETURN
 Auto	 Smart	 EXIT	 BACK
 Info	 Info	 HOME	 SMART
		 +	 +
		 -	 -
		 1	 2
		 2	 3
		 3	 4
		 4	 5
		 5	 6
		6	7
		7	8
		8	9
		9	0
		0	FAV
		GUIDE	PRE-CH
		A	B
		B	C
		C	D





	Originale	Sostituto	Originale	Sostituto
TEXT	Blue / Text			Blue
ZOOM	Red / Zoom			Eject
LAN/AUDIO	Green / Lan/Audio			Dual
PLAY/PAUSE	Yellow /			Play
PLAY/PAUSE	Yellow /			Pause
TEXT	Blue / Text			Text
TV/RADIO	<< / Tv/Radio			<<
TV/RADIO	<< / Tv/Radio			TV/R
SUBTITLE	>> / Subtitle			>>
SUBTITLE	>> / Subtitle			Subt

