





 
 



 

 















 
 

 
 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ASPECT	 Format
 P.C.	 Pre Ch
 MENU	 Menu
 SOURCE	 Shift + AV
 Up	 Up

Originale	Sostituto
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Exit	 Exit
 Display	 Info
 Vol +	 Vol +
 Vol -	 Vol -
 CH +	 Ch +
 CH -	 Ch -
 Sound	 Dual
 PIC	 Shift + Format
 NICAM	 Media
 SLEEP	 Sleep
 TV	 Smart
 AV	 AV
 HDMI	 Shift + Media





	Originale	Sostituto	
	SCART1	 Subt	
	Y.PB.PR	 +  Shift + Subt	
	RECALL	 Back	
	Red	 Red	
	Green	 Green	
	Yellow	 Yellow	
	Blue	 Blue	
	Reveal	 Play	
	Hold	 Pause	
	List	 List	
	Index	 Stop	
	Subpage	 Rec	
	Size	 3D	
	Auto	 Guide	
	Text	 Text	

Originale	Sostituto

