
 


 











 

 


 



 
 









 



 
 
 





 
 







 
 
 
 

 

 
 
 


 
 
 



Originale	Sostituto
 View DVD	 Media
 View VCR	 +  Shift + Media
 TV / VCR	 TV/R
 Input SEL.	 AV
 Standby / On	 Power
 Open / Close	 Eject
 Info	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 Timer	 +  Shift + AV
 F.ADV / Step	 Pre Ch
 I<<	 I<<
 Rec	 Rec
 Speed	 Sleep
 >>I	 >>I
 <<	 <<
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 >>	 >>
 TRK +	 Vol +
 TRK -	 Vol -
 Audio	 Dual
 Prog +	 Ch +
 Prog -	 Ch -
 Menu	 Menu





Originale		Sostituto	
	Return		Back
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Disc Menu		D. Menu
	Clear		Exit
	Zoom		Shift + Eject
	EZ View		Options
	Subtitle		Subt
	Angle / IPC		Format
	Mode / Repeat		Text
	Mark / Search		Shift + TV/R

Originale		Sostituto	

