 

 
 
 


 




Originale	Sostituto
 Power	 Power
 Guide	 Guide
 [ ]/Ratio	 Subt
 Info	 Info
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --	 List
 TV	 TV/R

Originale	Sostituto
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Settings/List	 Menu
 Back	 Back
 Exit	 Exit
 Q.Menu	 D. Menu
 FAV	 Pre Ch
 Mute	 Mute
 Simplink	 Media
 Q.View	 Options
 Energy/Saving	 3D
 AV Mode	 Format
 Vol+	 Vol +
 Vol-	 Vol -





	Originale	Sostituto	Originale	Sostituto
	CH+	Ch +		
	CH-	Ch -		
	Red	Red		
	Green	Green		
	Yellow	Yellow		
	Blue	Blue		
	Stop	Stop		
	Play	Play		
	Pause	Pause		
	<<	<<		
	>>	>>		

