

 


 



 


















 
 
 


 




 




Originale		Sostituto		Originale	Sostituto
	Power/Off		Power		
	Mute		Mute		
	AVR		1		
	VID1		2		
	VID2		3		
	AM/FM		4		
	VID3		5		
	VID4		6		
	<< / Tuning Dn		<<		
	>> / Tuning Up		>>		
	<< / Preset Dn		<<		
	>> / Preset Up		>>		
	Vol-		Vol -		
	Vol+		Vol +		


 
 





	Originale	Sostituto	Originale	Sostituto
	Power / Off			Power
	Mute			Mute
	Pause			Pause
	>>			>>
	<<			<<
	>>			>>
	I<<			I<<
	Play			Play
	Stop			Stop
	Vol +			Vol +
	Vol -			Vol -





Originale		Sostituto		Originale	Sostituto
	Power / Off		Power		
	Mute		Mute		
	<<		<<		
	>>		>>		
	Pause		Pause		
	I<<		I<<		
	>>I		>>I		
	Play		Play		
	Stop		Stop		
	Disc Skip +		Up		
	Disc Skip +		Ch +		
	Disc Skip -		Down		
	Disc Skip -		Ch -		
	Vol -		Vol -		
	Vol +		Vol +		





	Originale	Sostituto	Originale	Sostituto
	Mute	Mute		
	<<	<<		
	>>	>>		
	Pause	Pause		
	Rec	Rec		
	>	Right		
	<	Left		
	Stop	Stop		
	Vol +	Vol +		
	Vol -	Vol -		

