







 


















 


 



 





































Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 Size	 Zoom / Size
 [> <]	 Picture / Format
 A/B	 Shift + Yellow / YouTube /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 []	 Guide / EPG / -/--
 Up	 Up
 [i+]	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down

Originale	Sostituto
 Tools	 Setup / OPT /
 Menu	 Menu / Home
 Analog	 Display / Media
 Digital	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Text	 Text / Goto
 0	 0
 Recall	 Fav / Marker / PC
 Mute	 Mute / Dimmer





Originale		Sostituto		Originale		Sostituto	
	Vol+		Vol+				
	PR+		CH+ / Page+				
	Vol-		Vol-				
	PR-		CH- / Page-				

