 



 

 


 
 






 




 
 
 

 
 
 
 
 
 
 
 
 
 



 


 
 


 

 


 

 
 
 
 
 
 




 

 










 








Originale		Sostituto		Originale		Sostituto	
	Power		Power		Down / CH -		Down
	1		1		Right		Right
	2		2		Vol +		Vol +
	3		3		Left		Left
	4		4		Vol -		Vol -
	5		5		OK		Ok
	6		6		Pg Up		Ch +
	7		7		Pg Dn		Ch -
	8		8		Tv/Radio		TV/R
	9		9		Info		Info
	0		0		FAV		Pre Ch
	Sleep		Sleep		Audio		Dual
	Mute		Mute		Sub-T		Subt
	Recall		Back		TTX		Text
	Menu		Menu		EPG		Guide
	Exit		Exit		Digest		Options
	Up / CH +		Up		Play		Play





Originale	Sostituto	Originale	Sostituto
 Pause	 Pause		
 Stop	 Stop		
 Rec	 Rec		
 Red	 Red		
 <<	 <<		
 Green	 Green		
 >>	 >>		
 Yellow	 Yellow		
 List	 List		
 I<<	 I<<		
 >>I	 >>I		
 Blue	 Blue		

