


 

 

 

 



 

 

 







 












Originale	Sostituto
 Power	 Power
 [=]	 Text
 Sleep	 Sleep
 Color	 Options
 [+]/◆	 Info
 ?	 Smart
 16:9/[+]	 Format
 I-II/[≡i]	 Dual
 (<>)/X	 Exit
 Up	 Up
 P+	 Ch +
 P-	 Ch -
 Down	 Down
 Right	 Right
 Vol+	 Vol +
 Left	 Left
 Vol-	 Vol -

Originale	Sostituto
 Menu	 Menu
 Menu	 Ok
 Inst	 Media
 Source	 AV
 P<P	 Pre Ch
 Red/Picture	 Red
 Picture	 Shift + Format
 Green/Sound	 Green
 Sound	 Shift + Dual
 Yellow/Timer	 Yellow
 Timer	 Shift + AV
 Blue/Headphon	 Blue
 Headphones	 List
 1	 1
 2	 2
 3	 3
 4	 4





Originale		Sostituto		Originale		Sostituto	
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
0	0	0	0				
PP	PP	ZOOM	Eject				
	Mute	MUTE	Mute				

