

 

 











 




 
 





 

 

 

 


 









 


 



 

 





 
 
 
 




Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV / Input	 AV
 << Scan	 <<
 Scan >>	 >>
 I<< Skip	 I<<
 Skip >>I	 >>I

Originale	Sostituto
 Pause / Step	 Pause
 Play	 Play
 Stop	 Stop
 Home	 Smart
 Menu / List	 Menu
 List	 List
 Up	 Up
 PR / CH+	 Ch +
 PR / CH-	 Ch -
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Display	 Info
 Return	 Back
 O))) / Audio	 Dual
 [...] / Subtitle	 Subt





Originale	Sostituto
Zoom	+ Shift + Eject
Setup	Options
Rec	Rec
Rec Mode	+ Shift + Rec
Thumbnail	Format
CHP.ADD	Text
Play Mode	+ Shift + Play
Clear	Exit
Title	Guide
TV / DVD	TV/R
Power TV	+ Shift + Power
PR / CH+ TV	+ Shift + Ch +
PR / CH- TV	+ Shift + Ch -
Vol+ TV	Vol +
Vol- TV	Vol -
AV / Input TV	+ Shift + AV

Originale	Sostituto

