 

 
 






 

 

 

 
 
 
 

 


 
 
 
 
 
 
 
 


 


 
 
 
 

 
 





 


 
 

 

 


 
 
 
 

 

 




Originale	Sostituto
 Power	 Power
 Eject	 Eject
 Function	 D. Menu
 Preset/Folder Up	 Ch +
 Preset/Folder	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Program/Memor	 Options
 USB Rec	 Red
 Sleep	 Sleep
 Repeat	 Text
 Menu	 Menu
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 >>I/Tuning+	 Right

Originale	Sostituto
 I<</Tuning -	 Left
 Enter	 Ok
 Sound Effect	 Dual
 Auto DJ	 Subt
 Delete	 Exit
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Info	 Info
 *	 3D



