




Originale	Sostituto
 Power	 Power
 Open/Close	 Eject / Surround
 Power Tv	 Shift + Power
 DVD	 Shift + 2
 HDD	 Shift + 7
 AV/Input	 AV / Input / RDS
 AV/Input Tv	 Shift + AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR/CH+ Tv	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 PR/CH- Tv	 CH- / Page-
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 Vol+ Tv	 Vol+
 Dubbing	 Blue / Prime Video / Random
 0	 0
 Mute Tv	 Mute / Dimmer
 Vol- Tv	 Vol-
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Clear	 Exit / Cancel / Clear
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode
 Timer Rec	 Sleep / Timer
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Pause/Step	 Pause / Step / Freeze





Originale	Sostituto
Play	Play / Slow
Stop	Stop / Hold
Home	D.Menu / Top
Up/PR/CH+	Up
Menu/List	Menu / Home
Left	Left
Enter	OK
Right	Right
Display	Display / Media
Down/PR/CH-	Down
Return	Back / Return
Timeshift	Text / Goto
Marker	Fav / Marker / PC
Search	Red / Netflix / Search
Setup	Setup / OPT /
PIP	Smart / List
Zoom	Zoom / Size

Originale	Sostituto
Title	Sound / Title
CHP.ADD	Guide / EPG / -/-
I.Skip	Info / Angle
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Thumbnail	Picture / Format
TV/DVD	TV/Radio /

