



Originale	Sostituto
Power	Power
Select Drive	Pre Ch
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Del	List
Input Select	AV
CH+	Ch +
CH-	Ch -
Cast/Viera	Smart

Originale	Sostituto
Prog/Check	Sleep
I<< Skip	I<<
Skip >>I	>>I
<< Slow/Search	<<
Slow/Search >>	>>
Stop	Stop
Pause/Pause Live	Pause
Play/x1.3	Play
i/Status	Info
Exit	Exit
Pop-Up Menu/Direct	D. Menu
Guide	Guide
Function Menu	Menu
Up	Up
Down	Down
Right/II>	Right
<II/Left	Left





Originale	Sostituto
OK	Ok
Option	Options
Return	Back
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Rec	Rec
Rec Mode	Shift + Rec
Ext Link	Media
Direct Tv Rec	TV/R
[≡]/Text	Text
[≡♦]/STTL	Subt
Audio	Dual
Display	Shift + Info
Chapter	Format
Time Slip	Shift + Sleep

Originale	Sostituto
Manual Skip -10s	Shift + Left
Manual Skip +60s	Shift + Right
Power Tv	Shift + Power
AV Tv	Shift + AV
Vol+ Tv	Vol +
Vol- Tv	Vol -
CH+ Tv	Shift + Ch +
CH- Tv	Shift + Ch -

