

 

 





 
 

 



 
 




 
 
 

 


 



 


 


 


Originale	Sostituto	Originale	Sostituto
	Power		Blue/[ ]
	Vol+		Info
	Vol-		Text
	PR+		1
	PR-		2
	Mute		3
	Menu		4
	Exit		5
	Back		6
	OK		7
	Up		8
	Down		9
	Right/Zoom+		0/-/--
	Left/Zoom-		AV
	Red/[o]		SP/LP
	Green/Timer/List		Play
	Yellow		>>
			Blue
			Info
			Text
			1
			2
			3
			4
			5
			6
			7
			8
			9
			0
			AV
			Media
			Play
			>>










 
 

 
 






 

 


 
 

 

 


 


 



 


 


 
 


 

 

 
 
 



 
 


Originale		Sostituto		Originale		Sostituto	
	Power		Power		Blue/[ ]		Blue
	Vol+		Vol +		Info		Info
	Vol-		Vol -		Text		Text
	Mute		Mute		Play		Play
	PR+		Ch +		Stop		Stop
	PR-		Ch -		Rec		Rec
	Exit		Exit		Pause		Pause
	Menu		Menu		>>		>>
	Back		Back		<<		<<
	Up		Up		1		1
	Down		Down		2		2
	Right/Zoom+		Right		3		3
	Left/Zoom-		Left		4		4
	OK		Ok		5		5
	Red/[o]		Red		6		6
	Green/Timer/List		Green		7		7
	Yellow		Yellow		8		8







Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Blue/[ ]	 Blue
 Vol+	 Vol +	 Info	 Info
 Vol-	 Vol -	 Text	 Text
 Mute	 Mute	 1	 1
 PR+	 Ch +	 2	 2
 PR-	 Ch -	 3	 3
 Menu	 Menu	 4	 4
 Exit	 Exit	 5	 5
 Back	 Back	 6	 6
 Up	 Up	 7	 7
 Down	 Down	 8	 8
 Right/Zoom+	 Right	 9	 9
 Left/Zoom-	 Left	 0/-/--	 0
 OK	 Ok	 AV	 AV
 Red/[o]	 Red	 SP/LP	 Media
 Green/Timer/List	 Green	 Play	 Play
 Yellow	 Yellow	 Stop	 Stop



