




 
 


 




 




 




 


 
 

 

 
 

 
 



 
 
 
 
 
 
 

 
 


 
 
 

 
 
 
 
 
 
 
 


 
 
 

 

 
 
 

 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Blue/[]		Blue
	Vol+		Vol +		Info		Info
	Vol-		Vol -		Text		Text
	PR+		Ch +		1		1
	PR-		Ch -		2		2
	Mute		Mute		3		3
	Menu		Menu		4		4
	Exit		Exit		5		5
	Back		Back		6		6
	OK		Ok		7		7
	Up		Up		8		8
	Down		Down		9		9
	Right/Zoom+		Right		0/-/--		0
	Left/Zoom-		Left		AV		AV
	Red/[o]		Red		SP/LP		Media
	Green/Timer/List		Green		Play		Play
	Yellow		Yellow		>>		>>

 






 




 
 

 
 
 

 

 
 


 
 


 




Originale	Sostituto	Originale	Sostituto
 REV	<<		<<
 STOP	Stop		Stop
 PAUSE	Pause		Pause
 REC	Rec	 REC MODE	Rec
 MARK	Mark	 ECO 3D	3D
 0000	0000	 GUIDE	Guide





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Blue/[]	 Blue
 Vol+	 Vol +	 Info	 Info
 Vol-	 Vol -	 Text	 Text
 Mute	 Mute	 Play	 Play
 PR+	 Ch +	 Stop	 Stop
 PR-	 Ch -	 Rec	 Rec
 Exit	 Exit	 Pause	 Pause
 Menu	 Menu	 >>	 >>
 Back	 Back	 <<	 <<
 Up	 Up	 1	 1
 Down	 Down	 2	 2
 Right/Zoom+	 Right	 3	 3
 Left/Zoom-	 Left	 4	 4
 OK	 Ok	 5	 5
 Red/[o]	 Red	 6	 6
 Green/Timer/List	 Green	 7	 7
 Yellow	 Yellow	 8	 8

 

 




 
 


 

 
 
 

 
 

 






 






 

 

 

 

 
 
 

 

 






 



 
 
 




 
 




Originale	Sostituto	Originale	Sostituto
9	9		
AV	AV		
SP/LP	Media		





 




 
 
 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Blue/[]	 Blue
 Vol+	 Vol +	 Info	 Info
 Vol-	 Vol -	 Text	 Text
 Mute	 Mute	 1	 1
 PR+	 Ch +	 2	 2
 PR-	 Ch -	 3	 3
 Menu	 Menu	 4	 4
 Exit	 Exit	 5	 5
 Back	 Back	 6	 6
 Up	 Up	 7	 7
 Down	 Down	 8	 8
 Right/Zoom+	 Right	 9	 9
 Left/Zoom-	 Left	 0/-/--	 0
 OK	 Ok	 AV	 AV
 Red/[o]	 Red	 SP/LP	 Media
 Green/Timer/List	 Green	 Play	 Play
 Yellow	 Yellow	 Stop	 Stop





	Originale	Sostituto	Originale	Sostituto
	 FWD	>>		>>
	 REV	<<		<<
	 REC	Rec	 REC MODE	Rec
	 PAUSE	Pause		Pause
	 MARK	Mark	 3D	3D
	 0000	0000	 GUIDE	Guide

