 

 
 

 


 

 

 



 

 

 


 

 
 





 


 

 




 



 

 

 

 




 
 
 





 

Originale	Sostituto
 Power	 Power
 DVD	 Text
 HDD	 D. Menu
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV/Input	 AV
 Rec	 Rec
 << Scan	 <<

Originale	Sostituto
 Scan >>	 >>
 I<< Skip	 I<<
 Skip >>I	 >>I
 Pause/Step	 Pause
 Play	 Play
 Stop	 Stop
 Menu/List	 Menu
 Home	 Smart
 Return	 Back
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 PR+	 Ch +
 PR-	 Ch -





Originale	Sostituto
 PR List	 List
 EPG	 Guide
 Red/FAV	 Red
 Green/Repeat	 Green
 Yellow/Subtitle	 Yellow
 Blue/Text	 Blue
 O))/Audio	 Dual
 Title	 Subt
 Marker	 3D
 Clear	 Exit
 Timeshift	 Format
 Tv/DVD	 TV/R
 Power Tv	 Shift + Power
 AV/Input Tv	 Shift + AV
 PR/CH+ Tv	 Shift + Ch +
 PR/CH- Tv	 Shift + Ch -
 Vol+ Tv	 Vol +

Originale	Sostituto
 Vol- Tv	 Vol -

