



 



 







 


 
 




 

 





 





 
 





 
 
 
 
 
 
 


 



 
 
 

 
 


 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		>>		>>
	Open/Close		Eject		1		1
	DVD		Smart		2		2
	Display		Info		3		3
	Disc Menu		D. Menu		4		4
	Setup		Options		5		5
	Return		Back		6		6
	Up		Up		7		7
	Down		Down		8		8
	Right		Right		9		9
	Left		Left		0		0
	Enter		Ok		Program		Sleep
	Title		List		Clear		Exit
	Pause / Step		Pause		O)) / Audio		Dual
	Stop		Stop		[...] / Subtitle		Subt
	Play		Play		Marker		3D
	I<<		I<<		Search		TV/R












 











 






 




 


 



 



 






 








 
 

 
 
 




 




Originale		Sostituto	
	Camera / Angle		Red
	Zoom		Shift + Eject
	Repeat		Text
	Random		Yellow
	A-B		Green

Originale		Sostituto	





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 >>	 >>
 Eject	 Eject	 1	 1
 Tv / VCR	 TV/R	 2	 2
 VCR	 Smart	 3	 3
 AV	 AV	 4	 4
 CLK / CNT	 Info	 5	 5
 [ i ]	 Media	 6	 6
 Up	 Up	 7	 7
 Down	 Down	 8	 8
 Right	 Right	 9	 9
 Left	 Left	 0	 0
 OK	 Ok	 Clear	 Exit
 Pause / Step	 Pause	 O)) / Audio	 Dual
 Stop	 Stop	 Search	 Shift + TV/R
 Rec / ITR	 Rec	 C.Lock	 Back
 Play	 Play	 0Z Repeat	 Text
 I<<	 I<<	 CM Skip	 Yellow

Originale	Sostituto	Originale	Sostituto
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
 <a href="http://www.mandis.tv">www.mandis.tv</a>			



