 


 


 

 


 
 


 




 


 

 

 




 



 

 







 

 




Originale	Sostituto	Originale	Sostituto
 Sleep	 Sleep / Timer		 >> / Tune+
 Power	 Power		 Play / Slow
 Display	 Display / Media		 Pause / Step / Freeze
 Clock Timer	 D.Menu / Top		 Stop / Hold
 Clock Timer Set	 Menu / Home		 Exit / Cancel / Clear
 Tuner Memory	 Left	 Vol+	 Vol+
 Play Mode/Tuning Mode	 Right	 Enter	 OK
 Repeat/FM	 Green / APP / Repeat	 EQ	 Subtitle / EQ
 Repeat/FM	 Down	 Vol-	 Vol-
 Tape	 5	 Disc Skip	 Eject / Surround
 CD	 3	 Folder-	 CH- / Page-
 Band/Tuner	 Up	 Folder+	 CH+ / Page+
 Band/Tuner	 6		
 Function	 Smart / List		
 I<</-	 I<< / Preset-		
 >>I/+	 >>I / Preset+		
 <<	 << / Tune-		

Originale	Sostituto	Originale	Sostituto
	 >> / Tune+		 Play / Slow
	 Pause / Step / Freeze		 Stop / Hold
	 Exit / Cancel / Clear	 Vol+	 Vol+
 Enter	 OK	 EQ	 Subtitle / EQ
 Vol-	 Vol-	 Disc Skip	 Eject / Surround
 Folder-	 CH- / Page-	 Folder+	 CH+ / Page+

