 


 
 



 
 


 

 



 



 











 





 
 
 
 
 
 


 
 
 
 
 


 


 
 
 

 
 



 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Play		Play
	Enter		Ok		Pause		Pause
	Up		Up		Stop		Stop
	Down		Down		Tune+ />>		>>
	Right		Right		<</Tune-		<<
	Left		Left		<<		<<
	Vol+		Vol +		>>		>>
	Vol-		Vol -		1		1
	Mute		Mute		2		2
	CH/Page+		Ch +		3		3
	CH/Page-		Ch -		4		4
	Back		Back		5		5
	Setup		Menu		6		6
	Option		Options		7		7
	Info		Info		8		8
	Sleep		Sleep		9		9
	Home		Smart		0		0



 

 
 


 
 
 


 

 
 



 







 
 


 
 










 
 


 

 







 


 
 


 
 





Originale	Sostituto
Red/Movie	Red
Green/Music	Green
Blue/Game	Blue
Yellow/Pure	Yellow
Favorite Station 1	D. Menu
Favorite Station 2	Text
Favorite Station 3	Eject
Favorite Station 4	AV
InstaPreuve	3D
CBL/SAT	Shift + 1
DVD	Shift + 2
Blu-ray	Shift + 3
AUX1	Shift + 4
M-XPport	Shift + 5
Tuner	Shift + 6
Game	Shift + 7
AUX2	Shift + 8

Originale	Sostituto
Phono	Shift + 9
iPod/USB	Shift + Guide
Media Player	Media
CD	Pre Ch
Network	Guide
Internet Radio	TV/R
Tv Audio	Dual





Originale		Sostituto		Originale		Sostituto	
	Power		Power		2		2
	CH/Page+		Ch +		3		3
	CH/Page-		Ch -		4		4
	Sleep		Sleep		5		5
	Vol+		Vol +		6		6
	Vol-		Vol -		7		7
	Mute		Mute		8		8
	Back		Back		9		9
	Pause		Pause		0		0
	Play		Play		Enter		Ok
	Stop		Stop		Up		Up
	Home		Smart		Down		Down
	I<</Tune-		I<<		Right		Right
	>>/Tune+		>>I		Left		Left
	<<		<<		Favorite Station 1		D. Menu
	>>		>>		Favorite Station 2		Text
	1		1		Favorite Station 3		Eject



 


 

 
 

 

 



 
 
 
 





 


 
 



 



 
 


 
 
 
 



 





 

 



 




 


 



Originale	Sostituto
 Favorite Station 4	 AV
 CBL/SAT	 Shift + 1
 DVD	 Shift + 2
 Blu-ray	 Shift + 3
 AUX1	 Shift + 4
 M-XPport	 Shift + 5
 Tuner	 Shift + 6
 Game	 Shift + 7
 AUX2	 Shift + 8
 Phono	 Shift + 9
 iPod/USB	 Shift + Guide
 Media Player	 Media
 CD	 Pre Ch
 Network	 Guide
 Internet Radio	 TV/R
 Tv Audio	 Dual

Originale	Sostituto





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Play		Play
	Tv Audio		Dual		I<</Tune-		I<<
	Sleep		Sleep		>>I/Tune+		>>I
	Mute		Mute		<<		<<
	Back		Back		>>		>>
	CH/Page+		Ch +		1		1
	CH/Page-		Ch -		2		2
	Vol+		Vol +		3		3
	Vol-		Vol -		4		4
	Up		Up		5		5
	Down		Down		6		6
	Right		Right		7		7
	Left		Left		8		8
	Enter		Ok		9		9
	Home		Smart		0		0
	Stop		Stop		Favorite Station 1		D. Menu
	Pause		Pause		Favorite Station 2		Text





Originale	Sostituto
 Favorite Station 3	 Eject
 Favorite Station 4	 AV
 CBL/SAT	 Shift + 1
 DVD	 Shift + 2
 Blu-ray	 Shift + 3
 AUX1	 Shift + 4
 M-XPport	 Shift + 5
 Tuner	 Shift + 6
 Game	 Shift + 7
 AUX2	 Shift + 8
 Phono	 Shift + 9
 iPod/USB	 Shift + Guide
 CD	 Pre Ch
 Media Player	 Media
 Network	 Guide
 Internet Radio	 TV/R

Originale	Sostituto

