


























 







 
 






| Originale | Sostituto |
|------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|
|  Open / Close |  Eject / Surround |
|  Input Select |  AV / Input / RDS |
|  HDMI |  Shift + 0 |
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Prog + |  CH+ / Page+ |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Prog - |  CH- / Page- |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Time Slip |  Shift + >> / |
|  Sat. Link |  Smart / List |

| Originale | Sostituto |
|-----------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
|  0 |  0 |
|  Clear |  Exit / Cancel / Clear |
|  Info |  Info / Angle |
|  Text |  Text / Goto |
|  Audio |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ |
|  Guide |  Guide / EPG / -/- |
|  Top Menu |  Menu / Home |
|  Disc Menu |  D.Menu / Top |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Display |  Display / Media |
|  Down |  Down |
|  Return / Back |  Back / Return |
|  Red |  Red / Netflix / Search |





| Originale | Sostituto |
|-----------|-----------------------------|
| | Green / APP / Repeat |
| | Yellow / YouTube / Repeat |
| | Blue / Prime Video / Random |
| | Shift + Red / Netflix / |
| | << / Tune- |
| | Play / Slow |
| | >> / Tune+ |
| | I<< / Preset- |
| | Stop / Hold |
| | >>I / Preset+ |
| | Pause / Step / Freeze |
| | Shift + 4 |
| | Shift + 2 |
| | Shift + >>I / Preset+ |
| | Sound / Title |
| | Rec / Rec Mode |
| | Shift + Rec / Rec Mode |

| Originale | Sostituto |
|-----------|----------------|
| | Setup / OPT / |
| | Sleep / Timer |
| | TV/Radio / |
| | Shift + Play / |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

