







Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Recall	 Back
 Mute	 Mute	 Menu	 Menu
 1	 1	 Exit	 Exit
 2	 2	 Text	 Text
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 Ok
 8	 8	 EPG	 Guide
 9	 9	 Stop	 Stop
 0	 0	 Play	 Play
 Mark	 Pre Ch	 Pause	 Pause
 Tv/Radio	 TV/R	 Rec	 Rec
 Source	 AV	 <<	 <<
 Info	 Info	 >>	 >>
 Timeshift	 D. Menu	 I<<	 I<<

Originale	Sostituto	Originale	Sostituto
 Recall	 Back	 Return	 Menu
 Menu	 Menu	 Exit	 Exit
 Exit	 Exit	 Text	 Text
 Text	 Text	 Up	 Up
 Up	 Up	 Down	 Down
 Down	 Down	 Right	 Right
 Right	 Right	 Left	 Left
 Left	 Left	 OK	 Ok
 OK	 Ok	 EPG	 Guide
 EPG	 Guide	Stop	Stop
Stop	Stop	Play	Play
Play	Play	Pause	Pause
Pause	Pause	Rec	Rec
Rec	Rec	<<	<<
<<	<<	>>	>>
>>	>>	I<<	I<<
I<<	I<<		





	Originale	Sostituto	Originale	Sostituto
	>>I		>>I	
	Audio/Lang		Dual	
	Page Up		Smart	
	Page Down		Media	
	Vol+		Vol +	
	Vol-		Vol -	
	CH+		Ch +	
	CH-		Ch -	
	HDMI		3D	
	Zoom		Eject	
	Subtitle		Subt	
	Goto		Options	
	Red		Red	
	Green		Green	
	Yellow		Yellow	
	Blue		Blue	

