
 


 
 





 








 
 


 

 



 




















Originale	Sostituto
 Power	 Power
 Mute	 Mute
 DTV	 Smart
 Radio	 TV/R
 USB	 Options
 DVD	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Guide	 Guide

Originale	Sostituto
 Recall	 Back
 Vol +	 Vol +
 Vol -	 Vol -
 P.Mode	 Format
 S.Mode	 Shift + Dual
 FAV	 Pre Ch
 CH +	 Ch +
 CH -	 Ch -
 Menu	 Menu
 Exit	 Exit
 Info	 Info
 Source	 AV
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok





Originale	Sostituto
Sleep	Sleep
Aspect	3D
Subtitle	Subt
Text	Text
Audio	Dual
Text Hold	Shift + Text
Zoom / Text	Eject
Power / Display	Shift + Power
Rec / DVD Menu	Rec
I<<	I<<
>>I	>>I
Stop / Eject	Stop
<<	<<
>>	>>
Play	Play
Pause	Pause
Rec List / DVD Setup	List

Originale	Sostituto
Red / Goto	Red
Green / A-B	Green
Yellow / Angle	Yellow
Blue / Repeat	Blue

