



Originale	Sostituto
Power	Power
Audio In	1
AUX	2
Optical	3
HDMI In	4
Bluetooth	5
HDMI ARC	6
I<	I<<
Play	Play
Pause	Pause
>I	>>I
Bass+	Up
Bass-	Down
Treble+	Ch +
Treble-	Ch -
Vol+	Vol +
Vol-	Vol -

Originale	Sostituto
Mute	Mute
Sound	Dual
Audio Sync+	Right
Audio Sync -	Left
Delay Settings	Info
Vol Settings	Menu
Night	Back
DIM/Exit Settings	Exit

