


 
 
 


 



 


Originale		Sostituto		Originale		Sostituto	
	Power		Power		Exit		Exit
	Mute		Mute		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		Ok		Ok
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		Sound		Shift + Dual
	8		8		Pic		Shift + Format
	9		9		Ch+		Ch +
	0		0		Ch-		Ch -
	Audio		Dual		Sleep		Sleep
	Recall		Back		Aspect		Format
	Tv Menu		Menu		Freeze		Eject
	Source		AV		Tv/Radio		TV/R
	ChList		List		Text		Text





	Originale	Sostituto	
	Epg	 GUIDE	Guide
	Fav	 FAV PRE-CH	Pre Ch
	Info	 DISPLAY INFO	Info
	Red	 A	Red
	Green	 B	Green
	Yellow	 C	Yellow
	Blue	 D	Blue
	Reveal	 APP MEDIA	Media
	Hold	 E-MANUAL D.MENU	D. Menu
	Index	 SHIFT + DISPLAY INFO	Shift + Info
	Subpage	 SHIFT + TIMER AV	Shift + AV
	List	 HOME SMART	Smart
	Mix	 SETTINGS OPT	Options
	Subtitle	 AD SUBT	Subt
	Size	 ECO 3D	3D
	<<	 <<	<<
	>>	 >>	>>

	Originale	Sostituto	
	I<<	 I<<	I<<
	>>I	 >>I	>>I
	Play	 PLAY MODE	Play
	Pause	 Pause	Pause
	Stop	 Stop	Stop
	Rec/Rep	 REC MODE	Rec

