

 
 

 




 

 




 
 

 

 
 


 



 


 
 






 




 


 


 
 



 

 
 
 



 






Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Tv/Radio		TV/R
	Source		AV		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		Mute		Mute
	3		3		CH+		Ch +
	4		4		CH-		Ch -
	5		5		Menu		Menu
	6		6		Exit		Exit
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	[*]/Display		Info		Enter		Ok
	Recall		Back		TXT		Text
	Freeze		Options		Play		Play
	P.Mode		Format		Pause/Time Shift		Pause
	S.Mode		Dual		Stop/EPG		Stop





Originale	Sostituto
 Record	 Rec
 <</Index	 <<
 >>/Hold	 >>
 <</Reveal	 <<
 >> /Subpage	 >>
 Mix/Fav List	 Pre Ch
 Size/Subtitle	 Subt
 Cancel/Audio	 3D
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Originale	Sostituto

