



Originale	Sostituto
Source	AV / Input / RDS
Power	Power
Digital/Analog	Setup / OPT /
Tv/Radio	TV/Radio /
Sync Menu	Menu / Home
Exit	Exit / Cancel / Clear
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
[i]/[?]	Info / Angle
0	0

Originale	Sostituto
[≡]/Text	Text / Goto
Google Play	Display / Media
Netflix	Shift + Red / Netflix /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Action Menu	D.Menu / Top
Tv	Shift + 1
Up	Up
Guide	Guide / EPG / -/-
Left	Left
OK	OK
Right	Right
Back	Back / Return
Down	Down
Home	Shift + Menu / Home





Originale	Sostituto
Discover	Picture / Format
Vol+	Vol+
Recall	Fav / Marker / PC
Prog+	CH+ / Page+
Vol-	Vol-
Mute	Mute / Dimmer
Prog-	CH- / Page-
Audio	Audio / Lang I/II
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
[...]	Subtitle / EQ
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
>>I	>>I / Preset+
Help	Sleep / Timer
Rec	Rec / Rec Mode

Originale	Sostituto
Stop	Stop / Hold
Title List	Smart / List

