

 



 












 


















Originale	Sostituto
 Source	 AV / Input / RDS
 Power	 Power
 Digital/Analog	 Setup / OPT /
 Tv/Radio	 TV/Radio /
 Sync Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [i]/[?]	 Info / Angle
 0	 0

Originale	Sostituto
 [≡]/Text	 Text / Goto
 Google Play	 Display / Media
 Netflix	 Shift + Red / Netflix /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Action Menu	 D.Menu / Top
 Tv	 Shift + 1
 Up	 Up
 Guide	 Guide / EPG / -/-
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Shift + Menu / Home





Originale	Sostituto
Discover	Picture / Format
Vol+	Vol+
Recall	Fav / Marker / PC
Prog+	CH+ / Page+
Vol-	Vol-
Mute	Mute / Dimmer
Prog-	CH- / Page-
Audio	Audio / Lang I/II
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
[...]	Subtitle / EQ
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
>>I	>>I / Preset+
Help	Sleep / Timer
Rec	Rec / Rec Mode

Originale	Sostituto
Stop	Stop / Hold
Title List	Smart / List

