



Originale	Sostituto
Speakers TV Audio Bravia Sync	Shift + Sound / Title
Power AV Bravia Sync	Shift + Power
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
♥ Fav / Marker / PC	Fav / Marker / PC
[≡] Text / Goto	Text / Goto
0	0
Enter	Guide / EPG / -/--
Red	Red / Netflix / Search

Originale	Sostituto
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Top Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Return	Back / Return
Down	Down
Options	Setup / OPT /
Home/Menu	Menu / Home
Sound Mode	Sound / Title
I<</Preset-	I<< / Preset-
←	Shift + Left
→	Shift + Right
>>I/Preset+	>>I / Preset+





 





 



 

 



























 














 
 



 







Originale	Sostituto
Eject	Eject / Surround
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
♥	Fav / Marker / PC
0	0
Enter	Guide / EPG / -/--
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat

Originale	Sostituto
Blue	Blue / Prime Video / Random
Top Menu	D.Menu / Top
Up	Up
Pop Up Menu	Smart / List
Left	Left
OK	OK
Right	Right
Return	Back / Return
Down	Down
Options/Tools	Setup / OPT /
Function	Info / Angle
Home/Menu	Menu / Home
Sound Mode	Sound / Title
I<</Preset-	I<< / Preset-
←	Shift + Left
→	Shift + Right
>>I/Preset+	>>I / Preset+





Originale	Sostituto
 Speakers TV Audio Bravia Sync	 Sound / Title
 Power AV Bravia Sync	 Shift + Power
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Fav / Marker / PC	 Fav / Marker / PC
 Text / Goto	 Text / Goto
 0	 0
 Red / Netflix / Search	 Red / Netflix / Search
 Green / APP / Repeat	 Green / APP / Repeat

Originale	Sostituto
 Yellow / YouTube / Repeat	 Yellow / YouTube / Repeat
 Blue / Prime Video / Random	 Blue / Prime Video / Random
 Top Menu / D.Menu / Top	 Top Menu / D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Back / Return	 Back / Return
 Down	 Down
 Menu / Home	 Menu / Home
 Subtitle / EQ	 Subtitle / EQ
 Mute / Dimmer	 Mute / Dimmer
 Vol+	 Vol+
 CH+ / Page+	 CH+ / Page+
 Display / Media	 Display / Media
 Vol-	 Vol-
 CH- / Page-	 CH- / Page-



