



 


 


























 


 





 









	Originale	Sostituto	Originale	Sostituto
	Power			Pause
	Sleep			Stop
	Tuner/Band			I<<
	Auto/Mono			>>I
	1			Shift + Sleep
	2			Exit
	3			Blue
	4			Right
	5			Left
	6			Ok
	7			<<
	8			>>
	9			Rec
	0			Options
	+10			Dual
	CD			Ch +
	Play			Ch -



