


 







 
 

 



 







 

 











 



 


 





 
 











 

 

 

 

 

 

 





 



 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Green		Green / APP / Repeat
	Stop		Stop / Hold		Yellow		Yellow / YouTube / Repeat
	Pause		Pause / Step / Freeze		Blue		Blue / Prime Video / Random
	Rec		Rec / Rec Mode		i+/Info		Info / Angle
	<<		<< / Tune-		Options		Setup / OPT /
	Play		Play / Slow		Up		Up
	>>		>> / Tune+		Left		Left
	[[[/]]]		Zoom / Size		OK		OK
	*		D.Menu / Top		Right		Right
	[<>]		Picture / Format		Back		Back / Return
	Tv Guide		Guide / EPG / -/--		Down		Down
	Search		Shift + Red / Netflix /		Multiview		Display / Media
	Sources		AV / Input / RDS		Vol+		Vol+
	Smart Tv		Smart / List		List		Shift + Smart / List
	Home		Menu / Home		CH+		CH+ / Page+
	Exit/Tv		Exit / Cancel / Clear		Vol-		Vol-
	Red		Red / Netflix / Search		Mute		Mute / Dimmer





Originale	Sostituto	Originale	Sostituto
 CH-	 CH / Page-		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 Subtitle	 Subtitle / EQ		
 0	 0		
 Text	 Text / Goto		

