


 

 


Originale	Sostituto
Power Tv	Shift + Power
Power	Power
Review	Setup / OPT /
Tv/VCR	TV/Radio /
Tv/VCR Tv	Shift + TV/Radio / Program
Audio	Audio / Lang I/II
Mute Tv	Shift + Mute / Dimmer
---	Smart / List
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Originale	Sostituto
X	Exit / Cancel / Clear
0	0
Timer	Sleep / Timer
Start Debut +	Green / APP / Repeat
Start Debut -	Red / Netflix / Search
Stop Fin +	Blue / Prime Video / Random
Stop Fin -	Yellow / YouTube / Repeat
Date+	Vol+
PR+	CH+ / Page+
Date-	Vol-
PR-	CH- / Page-
Prog	D.Menu / Top
Timer/?	Shift + Sleep / Timer
I/II	Display / Media
30 Sec/>>>	Back / Return
<< button"/> <<	<< / Tune-
Play	Play / Slow





Originale	Sostituto
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Menu	 Menu / Home
 OK	 OK
 Up	 Up
 Tv PR+	 Shift + CH+ /
 Left/I<</-	 Left
 Tv Vol-	 Shift + Vol-
 Left/I<</-	 I<< / Preset-
 Right/>>I+	 >>I / Preset+
 Tv Vol+	 Shift + Vol+
 Right/>>I+	 Right
 Down	 Down
 Tv PR-	 Shift + CH- /

Originale	Sostituto

