

















| Originale   | Sostituto   |
|---|---|
|  Open/Close      |  Eject / Surround        |
|  Power           |  Power                   |
|  VCR             |  Shift + 4              |
|  DVD             |  Shift + 2              |
|  TV / VCR        |  TV/Radio /              |
|  TV / View       |  Smart / List            |
|  2               |  2                       |
|  4               |  4                       |
|  1 / Tracking -  |  1                       |
|  5               |  5                       |
|  3 / Tracking + |  3                      |
|  6             |  6                     |
|  7             |  7                     |
|  8             |  8                     |
|  9             |  9                     |
|  Clear         |  Exit / Cancel / Clear |
|  0             |  0                     |


| Originale   | Sostituto   |
|---|---|
|  P.Scan    |  Blue / Prime Video / Random |
|  Menu      |  Menu / Home                 |
|  Setup     |  Setup / OPT /               |
|  Up        |  Up                          |
|  PR+       |  CH+ / Page+                 |
|  PR-       |  CH- / Page-                 |
|  Down      |  Down                        |
|  Left      |  Left                        |
|  Right     |  Right                       |
|  Enter     |  OK                          |
|  Edit     |  Fav / Marker / PC          |
|  Display |  Display / Media           |
|  I<<     |  I<< / Preset-             |
|  I>>     |  I>> / Preset+             |
|  Pause   |  Pause / Step / Freeze     |
|  Play    |  Play / Slow               |
|  <<      |  << / Tune-                |



 


















| Originale  | Sostituto   |
|--|---|
|  Open/Close       |  Eject / Surround        |
|  Power            |  Power                   |
|  VCR              |  Shift + 4               |
|  DVD              |  Shift + 2               |
|  TV / VCR         |  TV/Radio /              |
|  TV / View        |  Smart / List            |
|  2                |  2                       |
|  4                |  4                       |
|  1 / Tracking -   |  1                       |
|  5                |  5                       |
|  3 / Tracking + |  3                     |
|  6              |  6                     |
|  7              |  7                     |
|  8              |  8                     |
|  9              |  9                     |
|  Clear          |  Exit / Cancel / Clear |
|  0              |  0                     |

| Originale   | Sostituto   |
|---|---|
|  P.Scan    |  Blue / Prime Video / Random |
|  Menu      |  Menu / Home                 |
|  Setup     |  Setup / OPT /               |
|  Up        |  Up                          |
|  PR+       |  CH+ / Page+                 |
|  PR-       |  CH- / Page-                 |
|  Down      |  Down                        |
|  Left      |  Left                        |
|  Right     |  Right                       |
|  Enter     |  OK                          |
|  Edit    |  Fav / Marker / PC         |
|  Display |  Display / Media           |
|  I<<     |  I<< / Preset-             |
|  I>>     |  I>> / Preset+             |
|  Pause   |  Pause / Step / Freeze     |
|  Play    |  Play / Slow               |
|  <<      |  << / Tune-                |



