




 






 




 




 
 

 



 


 

 






 
 
 





 

 

 





 










Originale	Sostituto
 Power	 Power
 Optical / Tv Sound	 TV/R
 Function	 D. Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Repeat	 Text
 I<< Skip	 I<<
 << Scan	 <<

Originale	Sostituto
 Scan >>	 >>
 Skip >>I	 >>I
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Vol +	 Vol +
 Vol -	 Vol -
 Mute	 Mute
 Speaker Level	 Options
 Mic / Echo	 Info
 Sound Effect	 Dual
 Home	 Smart
 Night/Moon	 Pre Ch
 Info / Menu	 Menu
 Up / Preset +	 Up
 Down / Preset -	 Down
 Right / Tuning +	 Right





Originale	Sostituto
Left / Tuning -	Left
Enter	Ok
Back	Back
Pop Up	Guide
Sleep	Sleep
Red / RDS	Red
Green / PTY	Green
Yellow / PTY	Yellow
Blue /	Blue
Power TV	+  Shift + Power
Input Tv	AV
Vol + Tv	+  Shift + Vol +
Vol - Tv	+  Shift + Vol -
PR/CH + Tv	Ch +
PR/CH - Tv	Ch -

Originale	Sostituto

