





 




 



 

 


 

















	Originale	Sostituto	Originale	Sostituto
	On/Standby	 Power		
	Source Power	 Shift + Power		
	1	 1		
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	Vol+	 Vol +		
	Vol-	 Vol -		
	Mute	 Mute		
	Channel+	 Ch +		
	Channel-	 Ch -		









 

 

 

 










Originale		Sostituto		Originale		Sostituto	
	On/Standby		Power		I<</Channel-		I<<
	Play		Play		>>/Tuning+		>>
	Stop		Stop		<</Tuning-		<<
	Still/Pause		Pause		DVS/Stereo		Dual
	Mute		Mute		Display		Info
	Vol+		Vol +		Subwoofer Level+		Ch +
	Vol-		Vol -		Subwoofer Level-		Ch -
	Push/Enter		Ok		Source Power		Shift + Power
	Up		Up		DVD/CD		Red
	Down		Down		FM/AM		Green
	Right		Right		AUX		Yellow
	Left		Left		iPod		Blue
	Menu/Guide		Guide		Home		Smart
	Top Menu		Menu		Net/USB		Media
	Return		Back		1		1
	Tool		Options		2		2
	>>I/Channel+		>>I		3		3





	Originale	Sostituto		Originale	Sostituto
	On/Standby	 Power			
	Source Power	 +  Shift + Power			
	Channel+	 Ch +			
	Channel-	 Ch -			
	Vol+	 Vol +			
	Vol-	 Vol -			
	Mute	 Mute			
	1	 1			
	2	 2			
	3	 3			
	4	 4			
	5	 5			
	6	 6			
	7	 7			
	8	 8			
	9	 9			
	0	 0			



