



Originale	Sostituto
	Power
	Open/Close
	Up
	CH+ / Page+
	I<< / Preset-
	Left
	Play / Slow
	Pause / Step / Freeze
	OK
	>>I / Preset+
	Right
	CH- / Page-
	Down
	Mute / Dimmer
	Display / Media
	Stop / Hold
	Menu / Home

Originale	Sostituto
	Smart / List
	Vol-
	Vol+
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TV/Radio /
	0
	Green / APP / Repeat
	Blue / Prime Video / Random
	Sleep / Timer



 
 











Originale	Sostituto
 Power	 Power
 Open/Close	 Eject / Surround
 Up	 Up
 Preset/Album+	 CH+ / Page+
 I<<	 I<< / Preset-
 I<<	 Left
 Play/Pause	 Play / Slow
 Play/Pause	 Pause / Step / Freeze
 Play/Pause	 OK
 >>I	 >>I / Preset+
 >>I	 Right
 Preset/Album-	 CH- / Page-
 Down	 Down
 Disp	 Display / Media
 Mute	 Mute / Dimmer
 Stop	 Stop / Hold
 Menu	 Menu / Home

Originale	Sostituto
 Max	 Smart / List
 Vol-	 Vol-
 Vol+	 Vol+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Prog/Clock Set	 TV/Radio /
 0	 0
 Repeat/Shuffle	 Green / APP / Repeat
 Repeat/Shuffle	 Blue / Prime Video / Random
 Sleep/Timer	 Sleep / Timer






 



 

 






 









Originale	Sostituto
 Power	 Power
 Open/Close	 Eject / Surround
 Up	 Up
 Preset/Album+	 CH+ / Page+
 I<<	 I<< / Preset-
 I<<	 Left
 Play/Pause	 Play / Slow
 Play/Pause	 OK
 Play/Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 >>I	 Right
 Preset/Album-	 CH- / Page-
 Down	 Down
 Disp	 Display / Media
 Mute	 Mute / Dimmer
 Stop	 Stop / Hold
 Menu	 Menu / Home

Originale	Sostituto
 Max	 Smart / List
 Vol-	 Vol-
 Vol+	 Vol+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Prog/Clock Set	 TV/Radio /
 0	 0
 Repeat/Shuffle	 Blue / Prime Video / Random
 Repeat/Shuffle	 Green / APP / Repeat
 Sleep/Timer	 Sleep / Timer

 

 

 

 








Originale	Sostituto
 Power	 Power
 Open/Close	 Eject / Surround
 Up	 Up
 Preset/Album+	 CH+ / Page+
 I<<	 I<< / Preset-
 I<<	 Left
 Play/Pause	 Play / Slow
 Play/Pause	 OK
 Play/Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 >>I	 Right
 Preset/Album-	 CH- / Page-
 Down	 Down
 Disp	 Display / Media
 Mute	 Mute / Dimmer
 Stop	 Stop / Hold
 Menu	 Menu / Home

Originale	Sostituto
 Max	 Smart / List
 Vol-	 Vol-
 Vol+	 Vol+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Prog/Clock Set	 TV/Radio /
 0	 0
 Repeat/Shuffle	 Blue / Prime Video / Random
 Repeat/Shuffle	 Green / APP / Repeat
 Sleep/Timer	 Sleep / Timer



