


 


 

 

 

 








Originale	Sostituto
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	SHIFT + GUIDE
	BACK
	A
	B
	C

Originale	Sostituto
	D
	SHIFT + PICTURE FORMAT
	SHIFT + SOUND DUAL
	ECO 3D
	REPEAT TEXT
	SOUND DUAL
	Up
	Down
	Right
	Left
	OK
	+ CH
	- CH
	+ VOL
	- VOL
	MUTE
	DISPLAY INFO





Originale		Sostituto		Originale		Sostituto	
	Sleep		Sleep		>>/PgDn		>>
	Rec		Rec		<</PgUp		<<
	Menu		Menu		Stop		Stop
	Hold		Options		Play		Play
	MIX		Media		Pause		Pause
	Subpg.	+	Shift + Subt		Repeat	+	Shift + Text
	Index		Exit				
	Size		Format				
	Reveal		Smart				
	DTV/Radio		TV/R				
	EPG		Guide				
	FAV		Pre Ch				
	List		List				
	PVR Menu		D. Menu				
	DTV Subt.		Subt				
	I<<		I<<				
	>>I		>>I				

