




 


 
 

 



 
 
 



 


 




 


 
 




 


 


 

 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		OK		Ok
	Right		Right		<</REW		<<
	Tv/Video		TV/R		>>/FFW		>>
	VCR		Guide		Play		Play
	DVD		Pre Ch		Pause		Pause
	Source		AV		I</Prev		I<<
	Options		Options		>I/Next		>>I
	USB		Smart		Rec		Rec
	Select		D. Menu		Stop		Stop
	Clear		Exit		Tv Vol+		Vol +
	Disc		Media		Tv Vol-		Vol -
	Setup		Menu		Dubbing/Direct		Text
	Back		Back		PR+		Ch +
	Info		Info		PR-		Ch -
	Up		Up		1		1
	Down		Down		2		2
	Left		Left		3		3





Originale		Sostituto	
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Subtitle		Subt
	Audio		Dual
	Rec Mode		Shift + Rec
	Timer		Shift + AV
	Edit		Format
	Showview		3D

Originale		Sostituto	

